



Spínanie pramie cez termostat

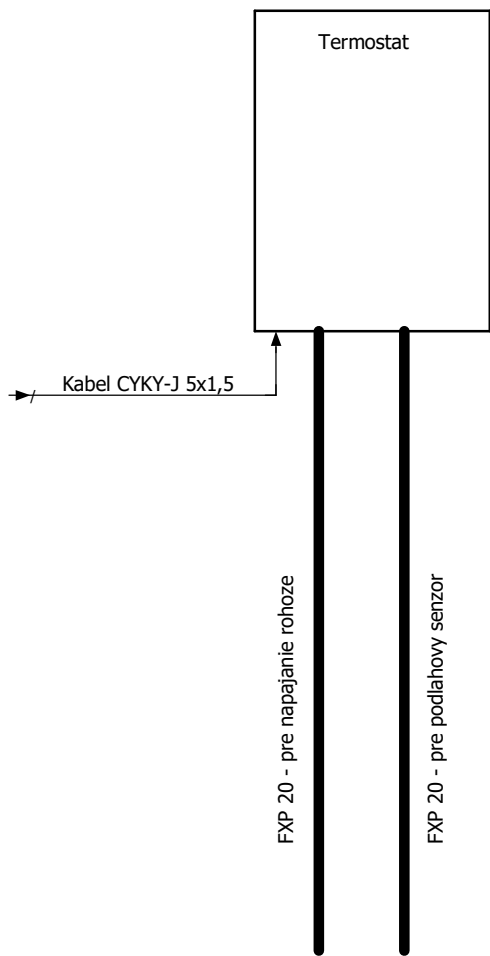

Spínanie cez stykac

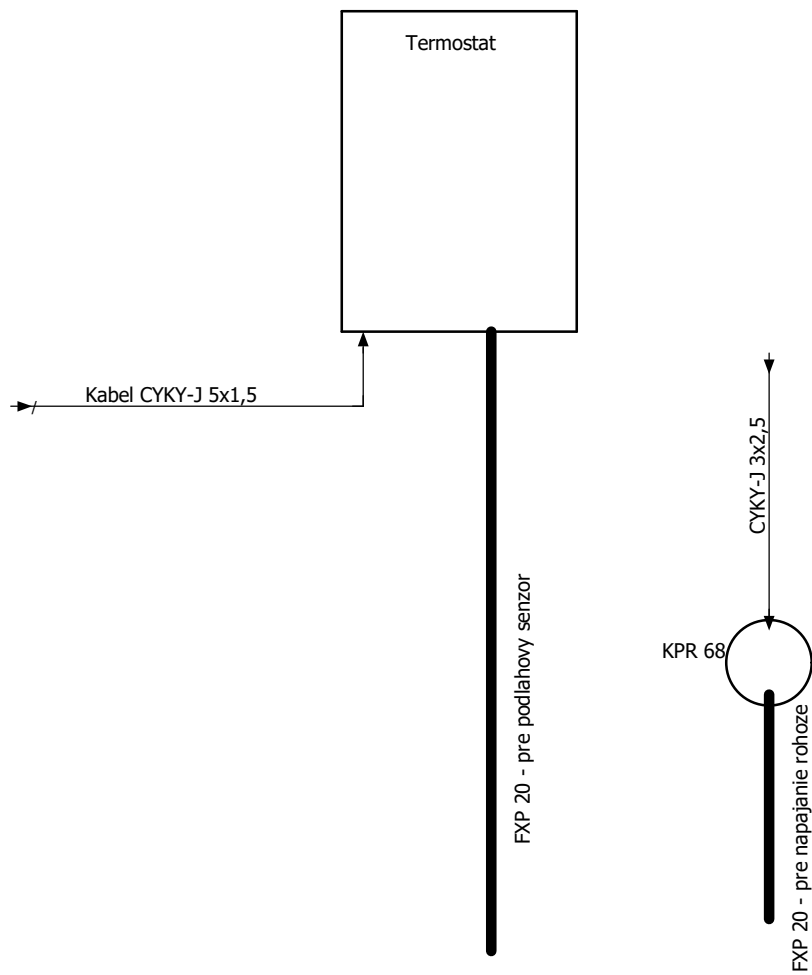

krabice pod termostat potrebne pouzivat s hlbkou min 70mm